
# Ìn**V**ue.

Series 940 Thin Sensor

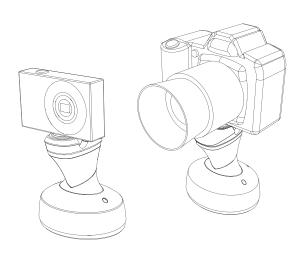

#### Overview

Read entire instruction guide before starting installation.

### **System Components**


- 1. Series 940 Camera Puck (EC9100, not included)
- 2. Thin Sensor (EC9138 or EC9139)
- 3. Docking Stations (2 included)
- 4. Anti-Theft Bracket (included)
- 5. IR Key (not included)

### Setup in 5 easy steps:

- Determine which docking station to use: small digital camera (use docking station with 4 prongs on bottom) or DSLR camera (use docking station with magnet on bottom)
- Attach docking station.
   Note: Once docking station is attached to sensor, it is permanently attached.
- 3. Attach merchandise to anti-theft bracket and sensor. Tighten screw.
- 4. Arm puck with IR key.

#### **System Overview:**

The Thin Sensor secures and powers cameras.

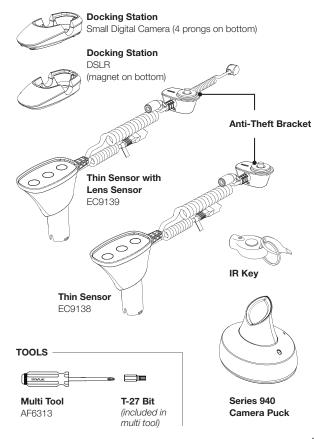

FC ( € 10 N13611

#### **DIGITAL CAMERA INSTALLATION**

 
(Use docking station with 4 prongs on bottom.)







Select docking station with 4 prongs on bottom. Firmly snap docking station into stem.

Note: Once docking station is attached to stem, it is permanently attached.



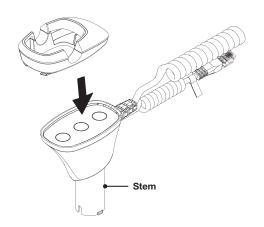


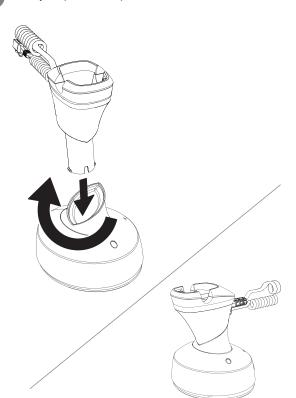



Align anti-theft bracket and camera to sensor. Tighten **SECURELY** with multi-tool (use T-27 bit). DO NOT strip plastic threads in camera mount.

Note: ALWAYS use anti-theft bracket.

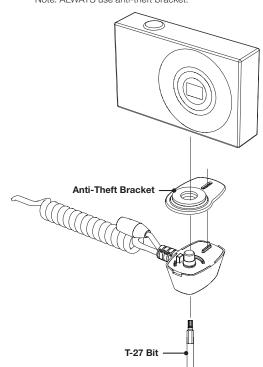





### Plug power connector\* into camera and sensor.

\*To determine which power connector is needed for the merchandise: 1) visit invuesecurity.com, 2) click on *login* and login, 3) click on *power connector selector*.



Place sensor onto docking station. Plug sensor cord into puck.

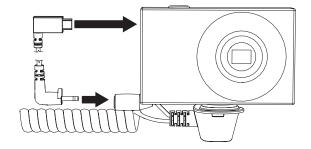

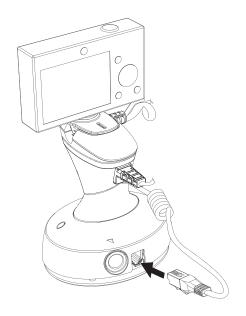


### **DSLR CAMERA INSTALLATION**

(Use docking station with magnet on bottom.)






Firmly snap stem into puck.

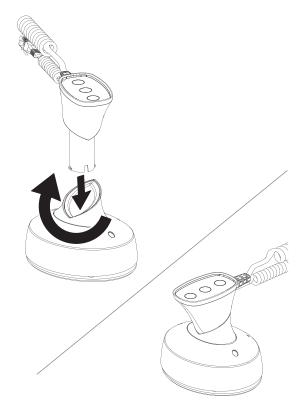



# Select docking station with magnet on bottom. Firmly snap docking station into sensor.


Note: Once docking station is attached to sensor, it is permanently attached.

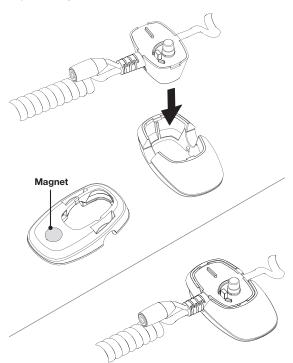



# Align anti-theft bracket and camera to sensor. Tighten **SECURELY** with multi-tool (use T-27 bit).

Note: ALWAYS use anti-theft bracket.

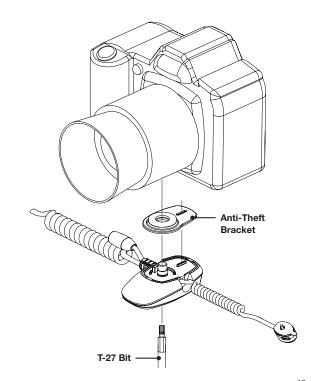





### Plug power connector\* into camera and sensor.


\*To determine which power connector is needed for the merchandise: 1) visit invuesecurity.com, 2) click on *login* and login, 3) click on *power connector selector*.



 Wipe merchandise with alcohol wipe provided. Let it dry completely.

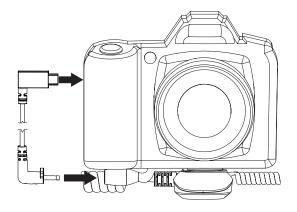


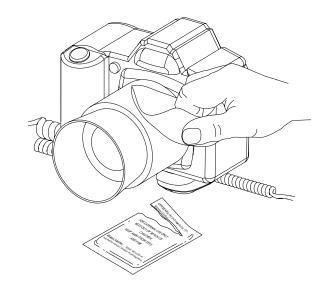






Place docking station onto sensor. Plug sensor cord into puck.

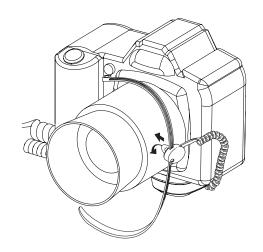

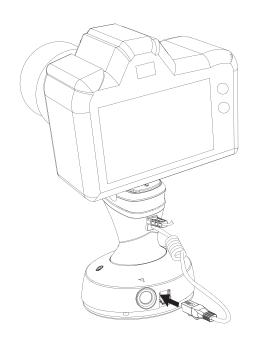



tough security made easy

#### www.invuesecurity.com

Corporate Office (North America) // 704.752.6513 • 888.55.INVUE

Europe, Middle East & Africa // +31.23.8900150

Asia Pacific // +852.3127.6811

Latin America // +52.55.9000.3957

© 2013 InVue Security Products Inc. All rights reserved. InVue is a registered trademark of InVue Security Products.